

AMAZON PARCEL DELIVERY P-80

Keyless Operation Manual



MORGAN
★ OLSON®

1801 S. Nottawa Street
Sturgis, MI 49091
Phone 800-233-4823
Fax (616-659-0499)
www.morganolson.com
www.morganolsonparts.com

Bulkhead Door

1. Press and hold fob button for 1-second
2. Bulkhead door automatically opens and remains open until driver manually closes door
3. Door automatically latches and locks when door closes

Bulkhead Door Quick Open

1. After stopping the truck using the Engine Stop button
2. Within 5-seconds, press the Engine Stop button a 2nd time
3. Bulkhead door automatically opens and remains open until driver manually closes door
4. Door automatically latches and locks when door closes

Rear Door

1. Quickly double-tap fob button
2. Rear door unlocks for 8-seconds
3. During the 8-seconds, unlatch the rear door and manually open it
4. Rear door must be manually closed
5. Door automatically latches and locks when door closes

KEYLESS START & STOP

Standard Start

1. Tap fob button once
2. Back light on Engine Start / Stop switches begin flashing
This indicates that a Valid ID has been detected
3. Within 5-seconds, press the Engine Start button once to initiate truck start sequence
4. Press the Engine Start button a 2nd time to crank starter
5. Release Engine Start button when engine turns over.
Truck is now in 'Run' mode

Truck Did Not Crank on 1st Press

1 If truck did not start, the Engine Start button can be pressed again within 5-seconds of releasing the Engine Start button to try and re-crank the truck starter motor.

Truck Engine Stop

- 1 If engine is running AND truck is stopped, press the Engine Stop button
- 2 Truck engine will turn Off

Quick Code Enrollment

1. Car **MUST** be stopped **AND** engine **OFF**
2. Press the fob button once
Engine Start / Stop switch back light begins flashing, indicating a Valid ID has been detected
3. **Press and HOLD** the Engine Stop switch for 5-seconds
Engine Start / Stop switch back light will turn **ON** solid
4. After 5-seconds has elapsed
Engine Start / Stop switch back light will flicker-flash indicating receiver is in “Learn” mode
5. **RELEASE** the Engine Stop switch
6. Press the button on **NEW** fob that is being enrolled
7. If code enrollment is successful
Engine Start / Stop switch back light will double flash and receiver will exit “Learn” mode
8. Test the new fob to verify it has been enrolled correctly

NOTE: Only ONE fob can be enrolled using the Manual ALL Erase & Code enrollment method