

# Code Enrollment Instructions

## Quick Code Enrollment

1. Unplug 10-pin connector on the receiver and then reconnect it.
2. During the 1st 10-seconds after reconnecting the receiver,  
Press and hold the dash unlock switch for 5-seconds.  
Release the dash switch when you observe the red “learn” LED start to flicker-flash.  
This means the receiver is in “learn” mode. The receiver will be in “learn” mode for 5-seconds.
3. When the receiver is in “learn” mode, press the button on the hand-held fob or transmitter.
4. The red “learn” LED will double flash indicating that the new hand-held fob has been enrolled.
5. Press the hand-held fob button once to test it.  
If the green status LED turns on for 6-seconds solid, the fob has been enrolled.



P/N 46029111



P/N 46029113

## Standard Code Enrollment

1. Open the receiver by removing the lid.
2. Identify the tact switch location on the PCB (small square component w/ round button, near the relays).
3. Press the tact switch once. The receiver will enter “learn” mode, indicated by the red “learn” LED flicker-flashing.  
The receiver will remain in “learn” mode for 20-seconds.
4. Press the button on the new hand-held fob or transmitter.
5. The red “learn” LED will double flash indicating that the new hand-held fob has been enrolled.
6. Press the hand-held fob button once to test it.  
If the green status LED turns on for 6-seconds solid, the fob has been enrolled.

## Code Removal or Erase

1. Place receiver into “learn” mode as indicated above in Standard Code Enrollment.
2. BUT instead of releasing the tact switch button, continue to press and hold it for a full 10-seconds.
3. When all codes have been erased, the red status LED will double flash and exit “learn” mode automatically.
4. All codes will be erased.

