


Installation Instructions

Filter Retro-Fit Kit # 555001019

STEP ONE

Attach locking mechanism to both of the air intake grilles (on the right side of the heater housing). Carefully tighten the screw so that the lock rotates with moderate effort, but will stay in its intended position.

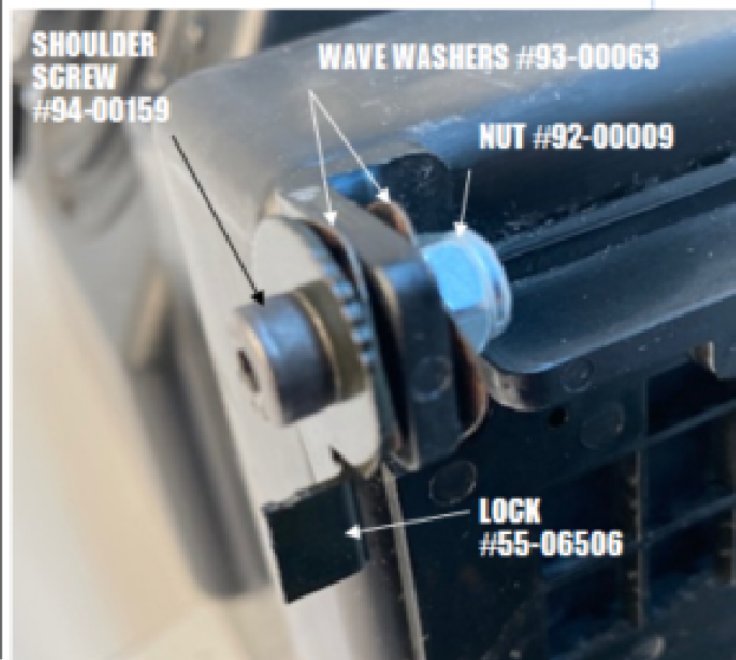

SCREWS, WASHERS, NUTS, AND LOCKS ARE INCLUDED IN KIT #555001019

STEP TWO

Insert filters into the filter racks of the intake grilles. Rotate the locks downward to hold the filters within the racks.



REL	REL TO PRODUCTION		
REV	DESCRIPTION OF CHANGE	BY	ECO# DATE
PROPRIETARY			
<small>This drawing and the information and data contained herein constitutes available proprietary, trade secret, information of Morgan Olson and may not be used, duplicated or further disclosed or disseminated for any purpose other than that purpose for which it was originally provided, without the prior written consent of Morgan Olson.</small>			
MORGAN OLSON		<small>DO NOT SCALE DRAWING</small> <small>TOLERANCES</small> <small>XX .0000</small> <small>XXX .0000</small> <small>XXXX .0010</small> <small>ANGLES .0°/30°</small> <small>ASME Y14.5M-2004 REMOVE ALL SHARP EDGES</small>	
DRAWN: EMM		DATE: 12/29/2020 ECO#: 67730	
DESCRIPTION: FLTR HTR VCS #70-08901 ADD ON			
PART#: 555001019			SHEET: 1 of 1 REV: REL