







Shelving Assembly Instructions


Part # 175105003 Rear Shelves and Part# 178048008 E-Track Assemblies.

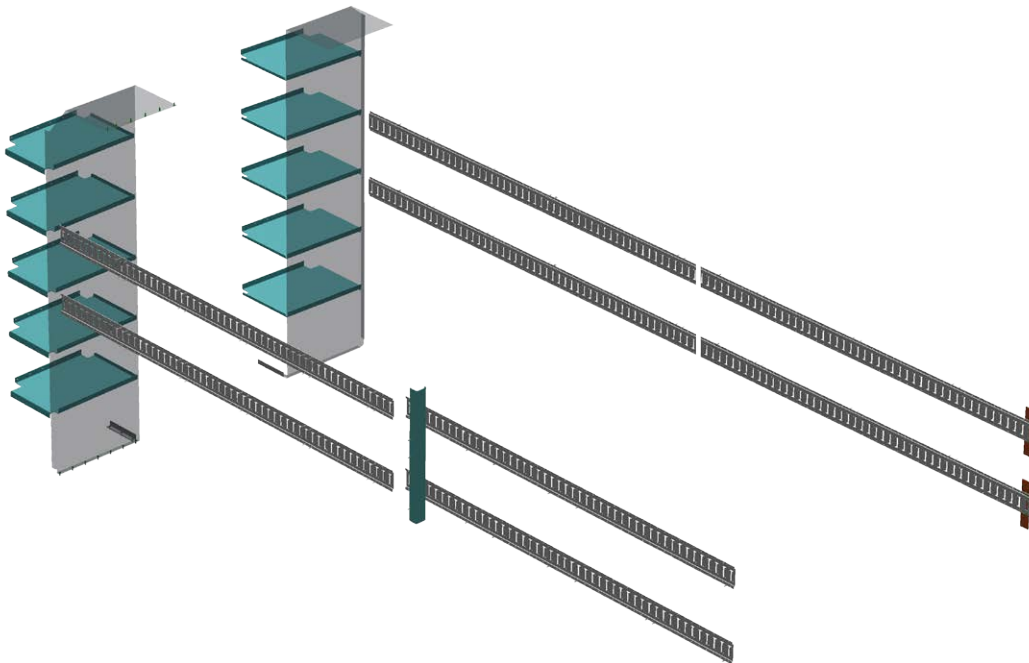

1.800.233.4823
WWW.MORGANOLSON.COM

Contents: Shelving Kit

Part#	Description		QTY.	UNIT
1117357	RIVET AL BR/HD #8 .188X.5		0.249	LB
1117361	RIVET AL BR/HD #10 .188X.625		0.156	LB
1117668	SCREW STL F PN/HD CP .25-20X.75		32	EA
175105413	ANGLE FLOOR AL 450187X9		2	EA
175105414	PANEL SHELF AL .102X20.15X26.09 LH		5	EA
175105415	PANEL SHELF AL .102X20.15X26.09 RH		5	EA
175105416	PANEL SHELF AL .102X25.6X104.35 LH		1	EA
175105417	PANEL SHELF AL .102X25.6X104.35 RH		1	EA

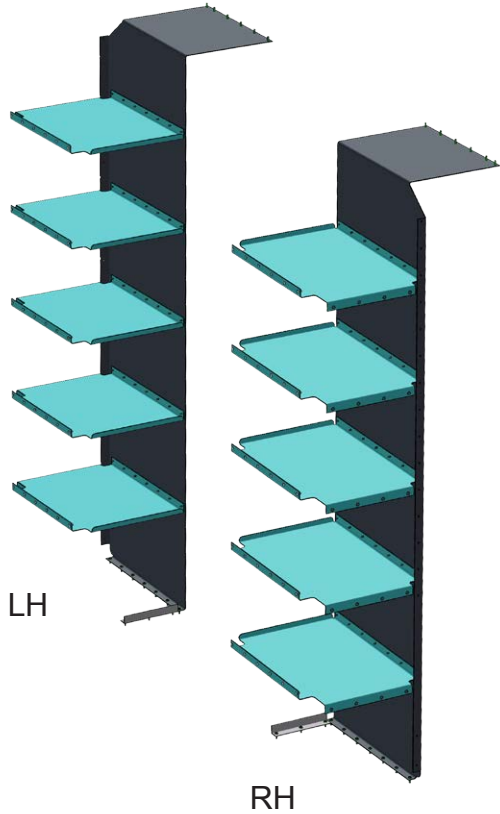

2 People
1-1/2 to 2 Hours

Tools Required:

Drill
Drill bits
Drill Stop



Air hammer & Rivet tool
Magna Lock Huck Gun




Square or small level
Center Punch
Hammer



Right Hand
Curbside

Left Hand
Roadside

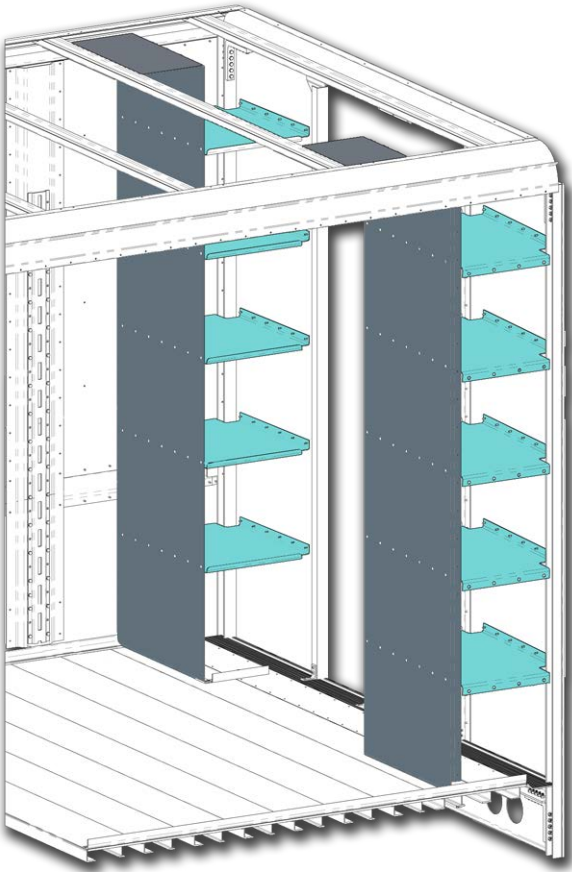

Installed
Cut away view

Unpack materials and verify that all items are present.

Attach the horizontal shelf panels to the vertical end panel using the 1117357 rivets.

Fit the shelf assembly in place and make sure that the horizontal panels are level,
use the holes in the shelf panel to mark the drill locations at the back and side panels.

Use a center punch to lightly mark the center of each hole to help prevent the drill tip from wandering.

With the holes drilled in the rear and side panels, refit the shelf assembly back into place and secure with 1117357 rivets.

Secure at floor using 1117668 Screws (Predrill holes using a #2 drill bit)



Secure at ceiling using 1117668 Screws.



**Use a drill stop to prevent
drilling through the roof skin.**

Secure angle aluminum at floor to prevent items sliding out into the isle way using 1117668 screws.

Installing E-Track Kits

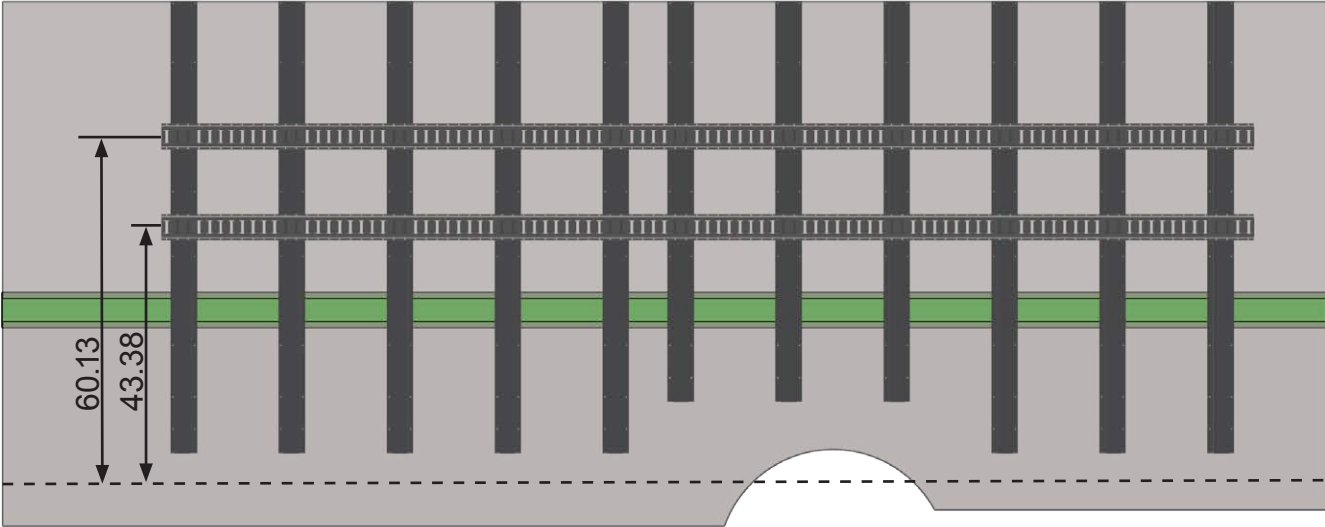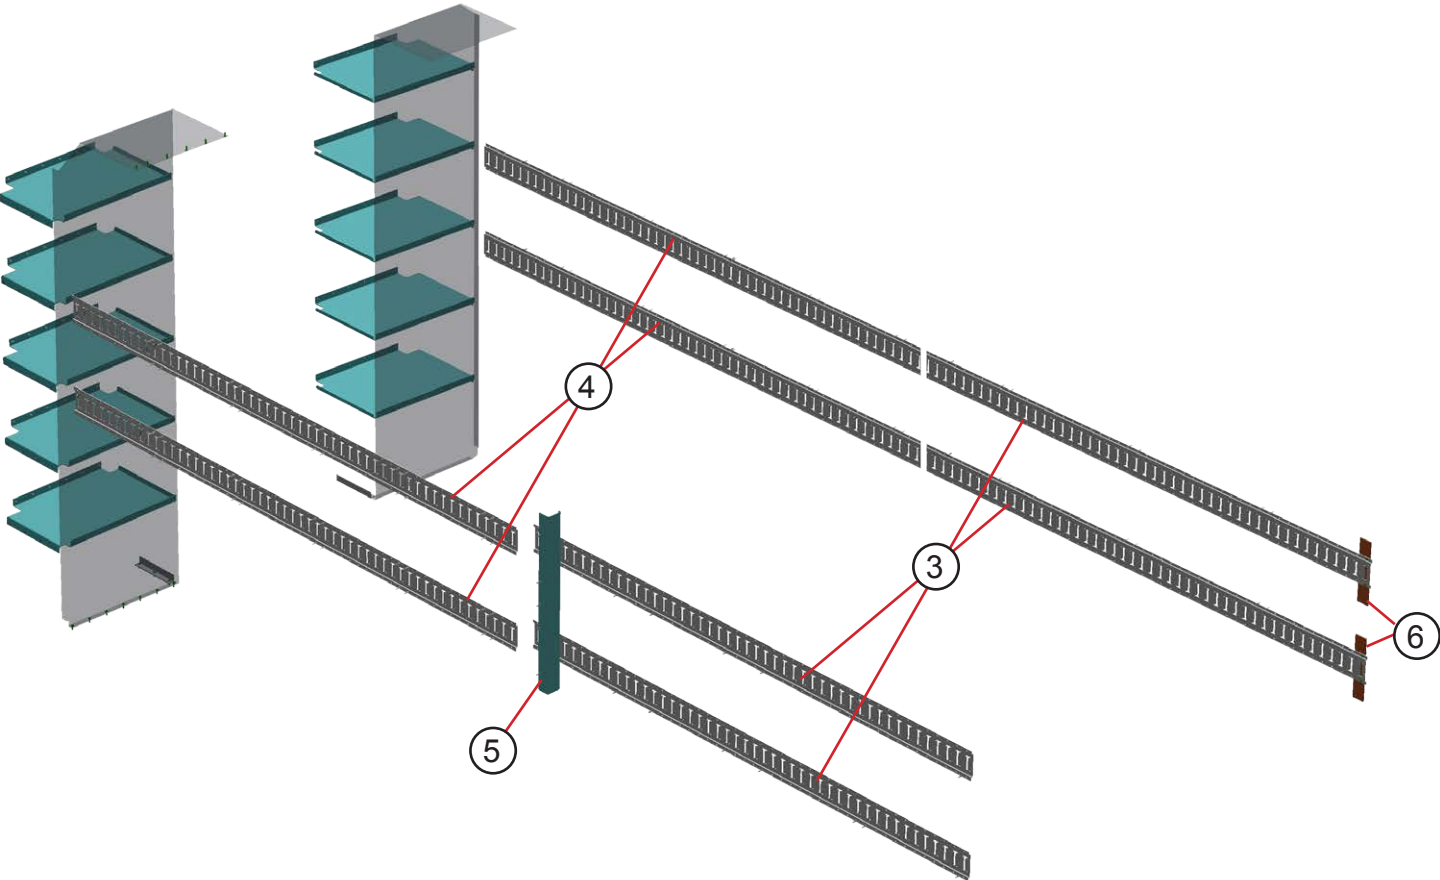

Align E-Track at your preferred height, making sure it is level and that there are two holes lined up at each stiffener.
(Recommended height, 43.38 and 60.13 Center of E-track to floor)

Mark the hole locations and use the center punch at each location to help prevent the drill tip from wandering.




Use a drill stop to prevent drilling through the exterior.


Secure using magna lock hucks 40200303

Secure the 30" stiffener 178048412 to the side wall using the brad head rivets 1117355

Contents: E-Track Kit


Part #	Description	QTY.	UNIT
1 1117355	RIVET AL BRAD/HEAD #7 .188 X.438	0.91312	LB
2 40200303	RIVET MAGNA LOCK HUCK #MGLP-R8-E	176	EA
3 178048407	E/TRACK 1101531X94	4	EA
4 178048408	E/TRACK 1101531X108	4	EA
5 178048412	STIFFENER E/TRACK AL .125X6.55X30.88	1	EA
6 178048414	SHIM STIFFENER E/TRACK AL .125X2.17X11	4	EA

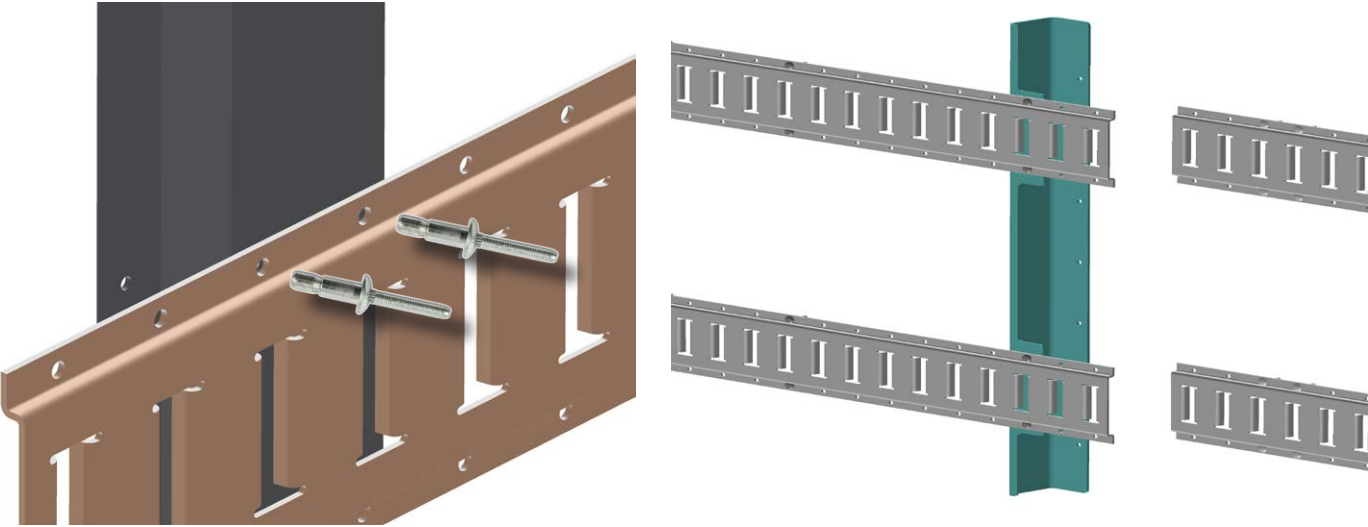

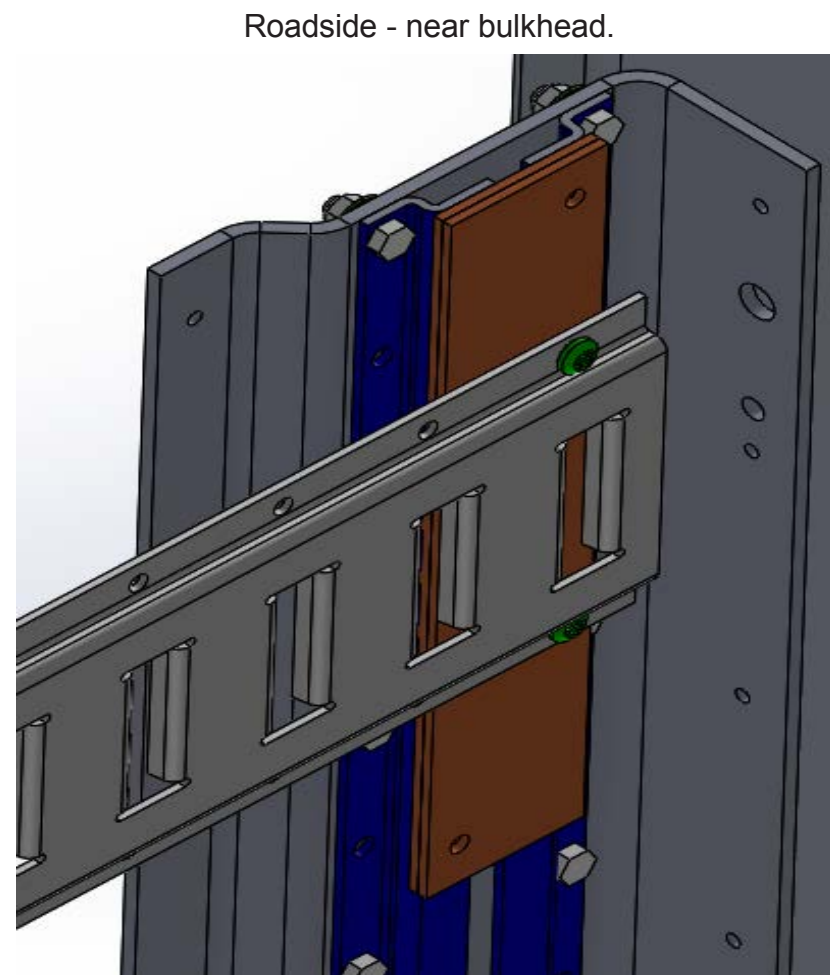

Use two 1.25" shims to fill the .25" gap between E-Track and A-Track.

Match-Drill mounting holes.

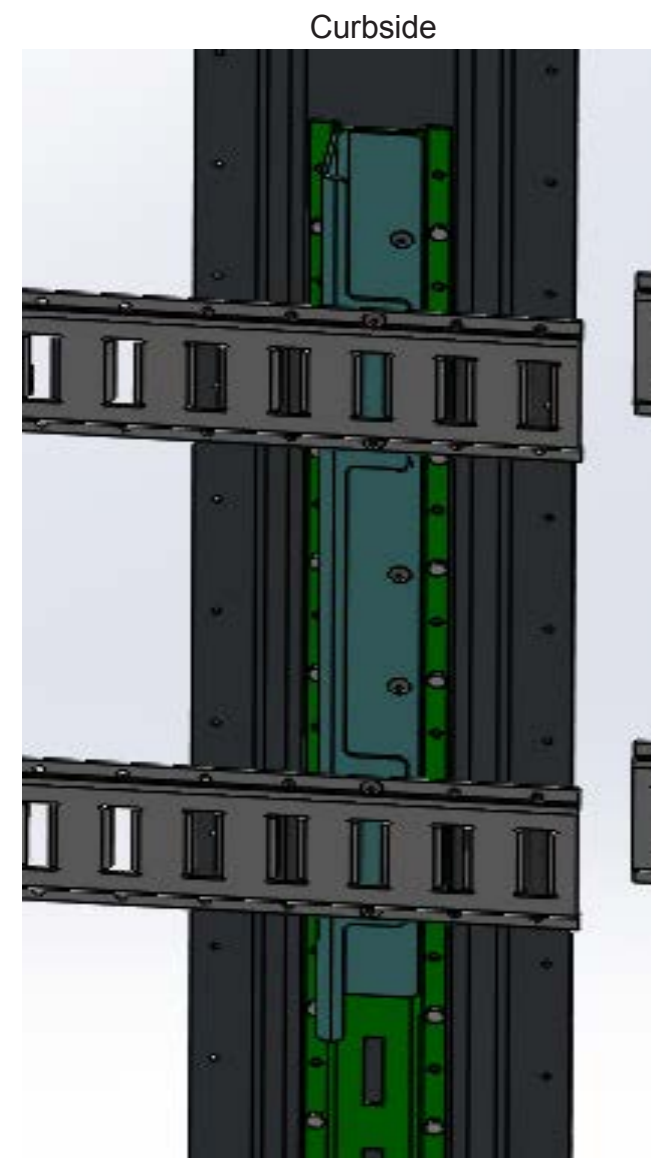

Install the stiffener, 178048412 to the existing curbside vertical A-Track as shown at left.

Match-Drill using the mounting holes in the stiffener as a template.